



Acroprint M150MC4 Mounting Template

1. Hold this template against the wall and drill holes where marked using a 3/16" bit.
2. Insert the anchors into all the holes.
3. Screw in the top two screws.
4. Attach the bracket (A) to the wall with the bottom two screws.
5. Feed the power cable through the hole in the bracket and plug it into the clock.
6. Hang the clock on the top two screws.
7. Secure the remaining screws through the bracket into the bottom of the clock.

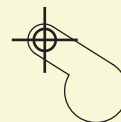

Wall Mount Bracket Holes

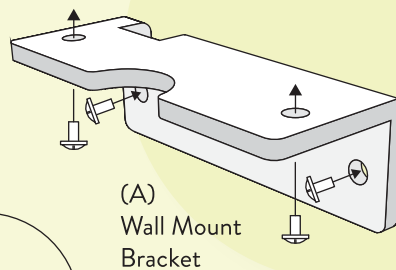